
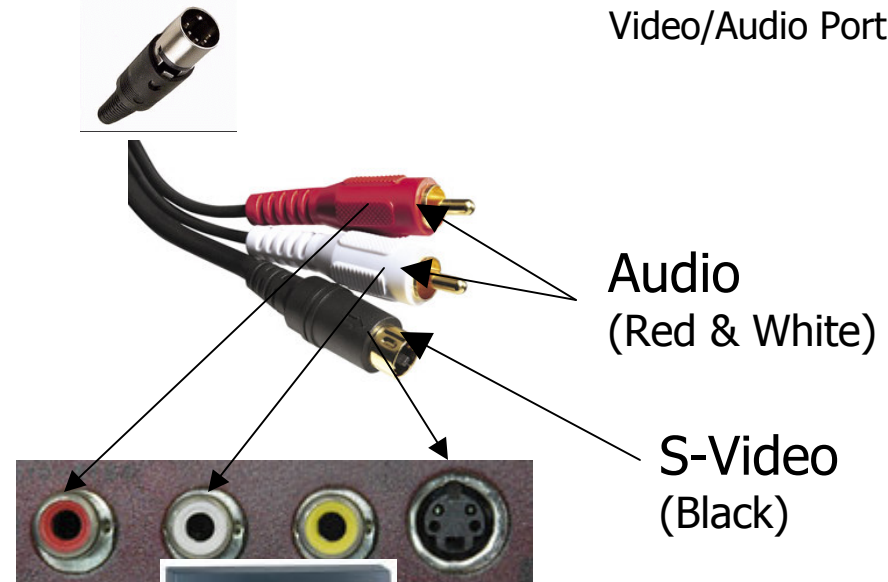


# Commodore 64C/128 S-Video Cable: connection instructions [stereo]

- 1) Turn computer off
- 2) Connect black (DIN) connector to Commodore 64C/128 video/audio port, located in the back of the computer
- 3) Plug the s-video connector to S-Video IN in the TV Set
- 4) Plug Red and White RCA connectors to Audio (R and L) IN in the TV Set
- 5) Turn TV on
- 6) Turn computer on

Note: The audio signal is still monophonic because the computer does not generate stereophonic sound

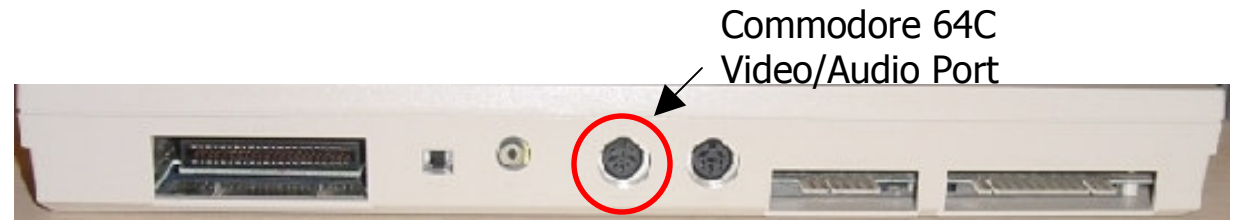

TV Set



Additional information:  
<http://www.vintagecomputercables.com>